

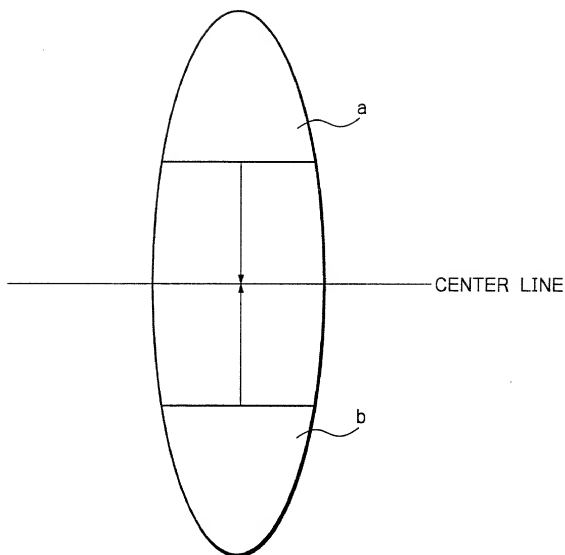
Fig. 1

Fig. 2

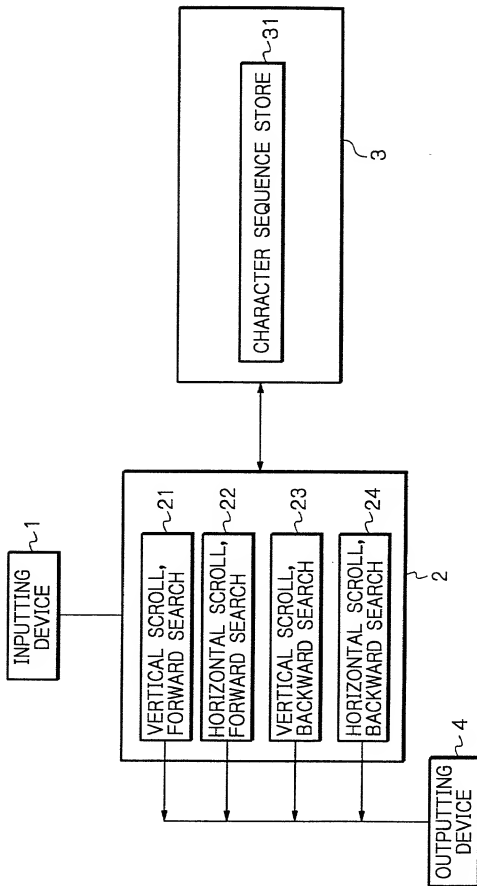


Fig. 3


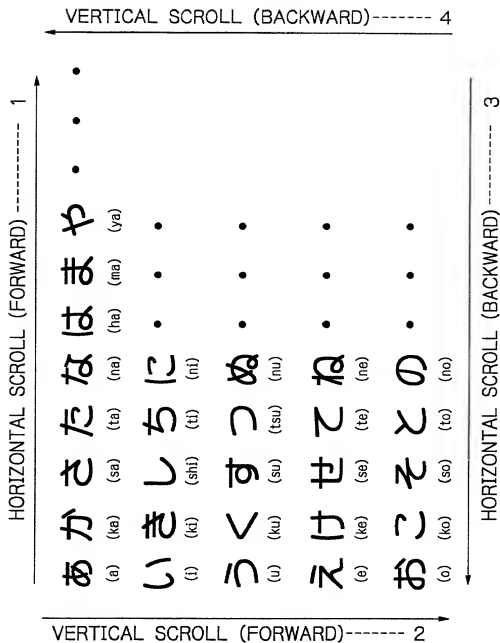


Fig. 4

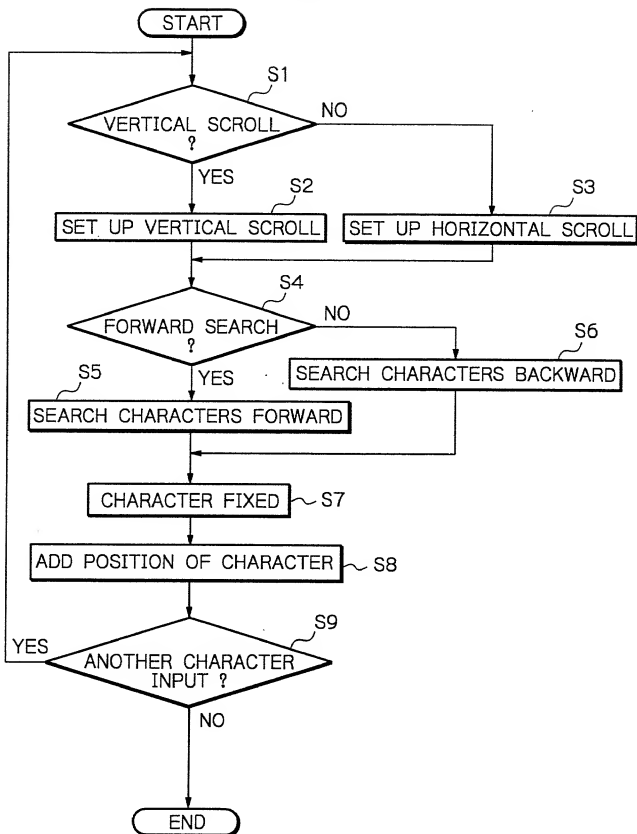

0991358.1.1901
10611251660

Fig. 5

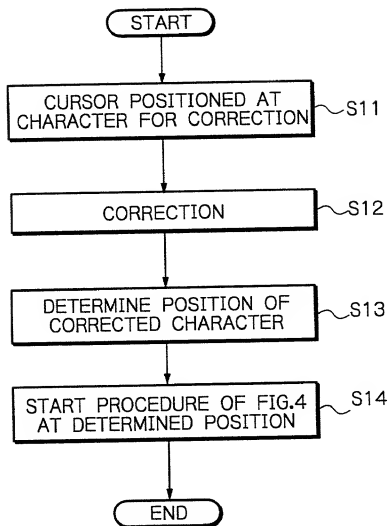


Fig. 6

	PRESS	SHIFT	SHIFT & PRESS
BUTTON a	FORWARD	FIX CHARACTER	MOVE CURSOR TO RIGHT
BUTTON b	BACKWARD	FIX CHARACTER	MOVE CURSOR TO LEFT
BUTTONS a & b	VERTICAL/HORIZONTAL SWITCHING	NONE	NONE

Fig. 7


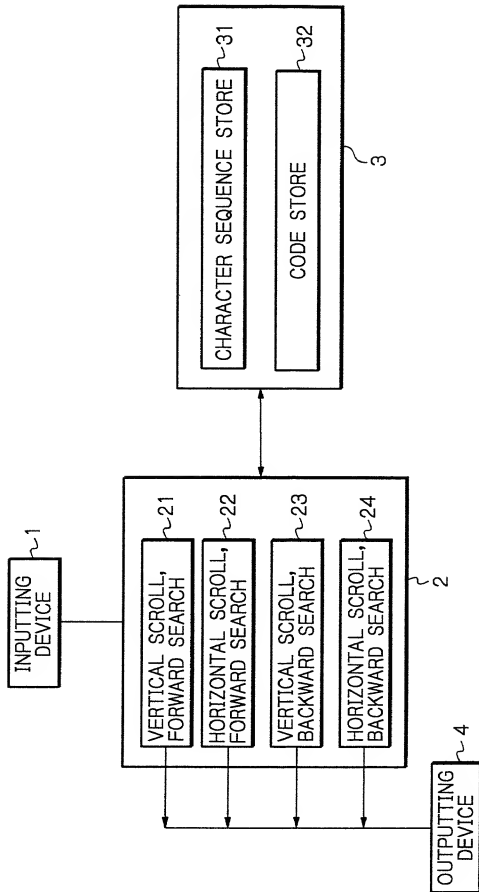


Fig. 8

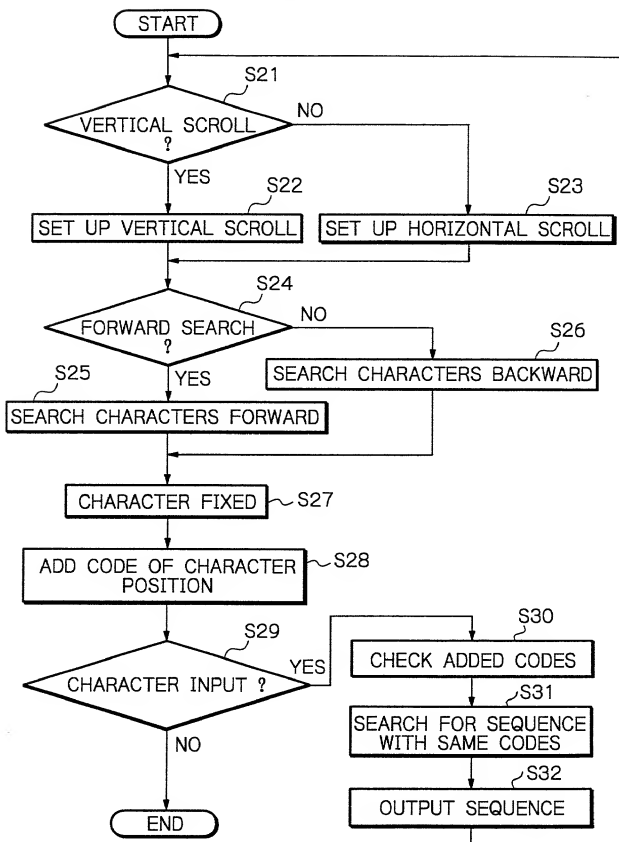

09991358-111901